


Addendum to


Somerset Corner Cabinet Berkshire Wall Mantel Berkshire Corner Cabinet Installation Instructions

Riser Kit **Assembly Instructions, Directives** d'assemblage, Instrucciones de ensamble

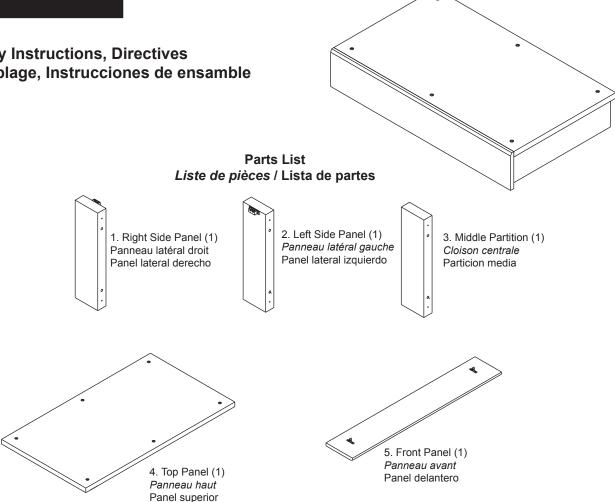


Hardware List Emballage de quincaillerie, Paquete de accesoirios






D. Flat Head Screw 13/4" (6) Vis (45 mm) Tornillo

Step 1A = 6 pcs B = 6 pcs

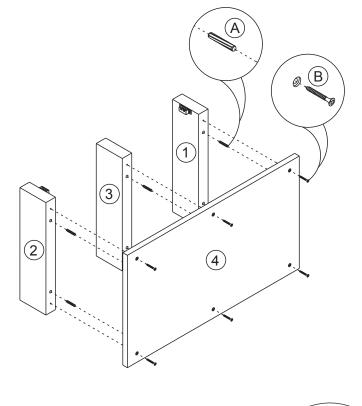

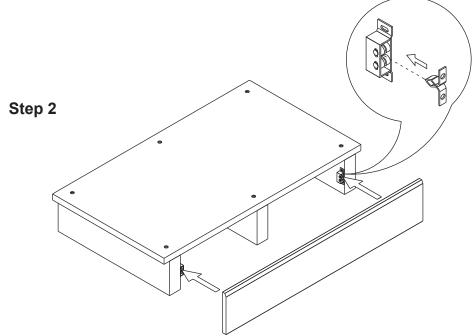

CFM Corporation

2695 Meadowvale Blvd. • Mississauga, Ontario, Canada L5N 8A3 800-668-5323 • www.cfmcorp.com